

Temperature monitor TB 40-1



TB40-1
TB40-1
TB40-1
TB40-1
TB40-1
TB40-1


universal line
universal line

Operating manual
English
9499-040-63411
Valid from: 8505






BlueControl

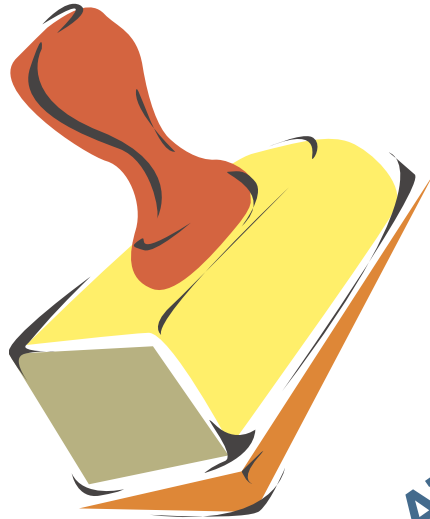More efficiency in engineering,
more overview in operating:
The projecting environment for the BluePort® controllers



ATTENTION!
Mini Version and Updates on
www.pma-online.de
or on PMA-CD

Description of symbols in the text:

-  General information
-  General warning
-  Attention: ESD-sensitive devices

on the device:

-  Follow the operating instructions



© PMA Prozeß- und Maschinen-Automation GmbH • Printed in Germany
All rights reserved. No part of this document may be reproduced or published in any form or by
any means without prior written permission from the copyright owner.

A publication of PMA Prozeß- und Maschinen Automation
P.O.Box 310229
D-34058 Kassel
Germany

Contents

| | | |
|-----------|--|-----------|
| 1 | Mounting | 4 |
| 2 | Electrical connections | 5 |
| 2.1 | Connecting diagram | 5 |
| 2.2 | Terminal connection | 5 |
| 3 | Operation | 7 |
| 3.1 | Front view | 7 |
| 3.2 | Behaviour after power-on | 7 |
| 3.3 | Behavior with sensor break/ measuring circuit error | 8 |
| 3.4 | Setting of the limit value LC / Extended operating level | 8 |
| 3.5 | Maintenance manager / Error list | 10 |
| 3.6 | Alarm handling | 11 |
| 3.6.1 | Alarm handling limit value LC | 11 |
| 3.6.2 | Alarm handling additional alarms | 12 |
| 3.7 | Operating structure | 13 |
| 4 | Configuration level | 14 |
| 4.1 | Configuration survey | 14 |
| 4.2 | Configuration | 15 |
| 5 | Parameter setting level | 18 |
| 5.1 | Parameter survey | 18 |
| 5.2 | Parameters | 19 |
| 5.3 | Input scaling <i>Input</i> | 20 |
| 6 | Calibration level | 21 |
| 7 | BlueControl | 24 |
| 8 | Versions | 25 |
| 9 | Technical data | 26 |
| 10 | Safety hints | 29 |
| 10.1 | Resetting to factory setting | 31 |

1 Mounting

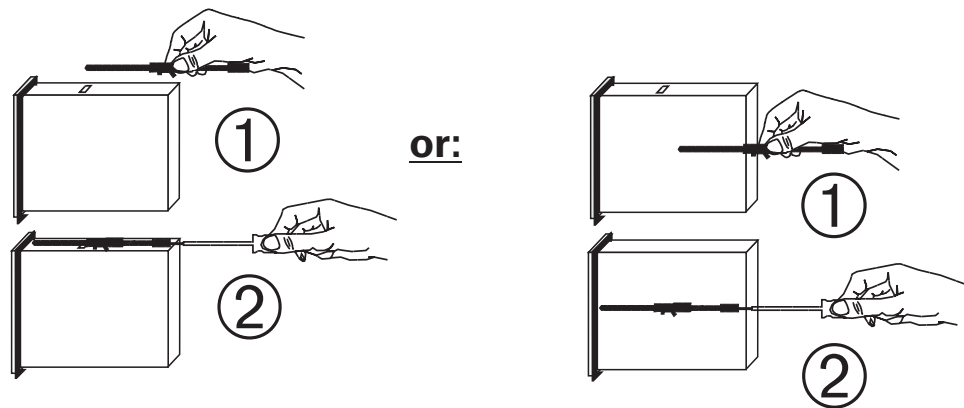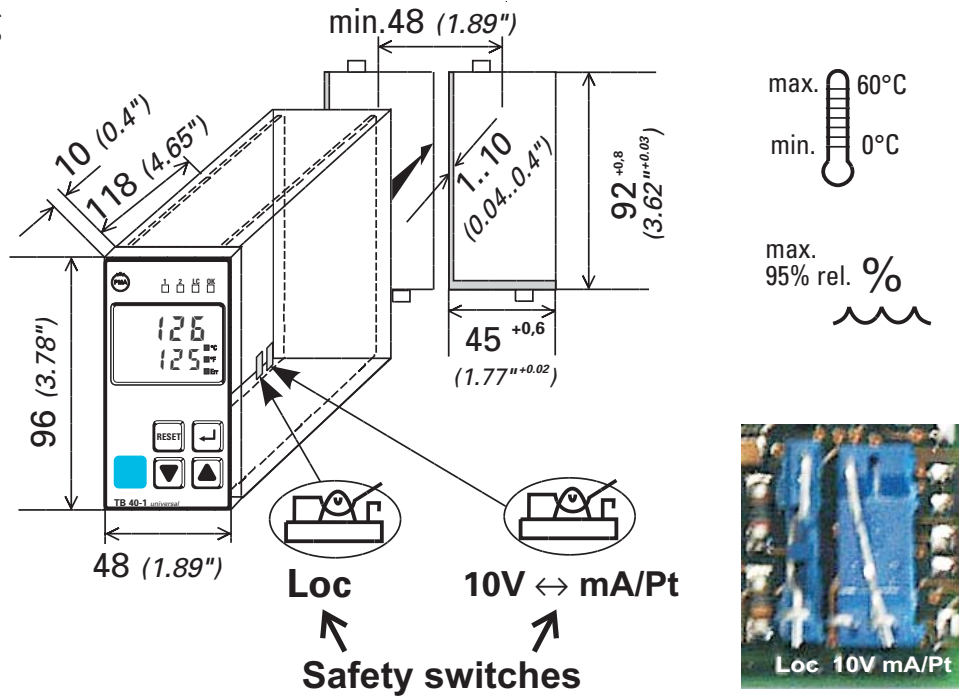

Safety switch:

For access to the safety switches, the controller must be withdrawn from the housing. Squeeze the top and bottom of the front bezel between thumb and forefinger and pull the temperature limiter firmly from the housing..

| | | |
|-------------|----------|--|
| 10V ↔ mA/Pt | right ① | Current signal / Pt100 / thermocouple at <i>1 n P. 1</i> |
| | left | Voltage signal at <i>1 n P. 1</i> |
| Loc | open | Access to all levels locked |
| | closed ① | all levels accessible via password <i>P A S S</i> |

① Factory setting




Safety switch 10V ↔ mA/Pt always in position left or right. Leaving the safety switch open may lead to faulty functions!



Caution! The unit contains ESD-sensitive components.

2 Electrical connections

2.1 Connecting diagram

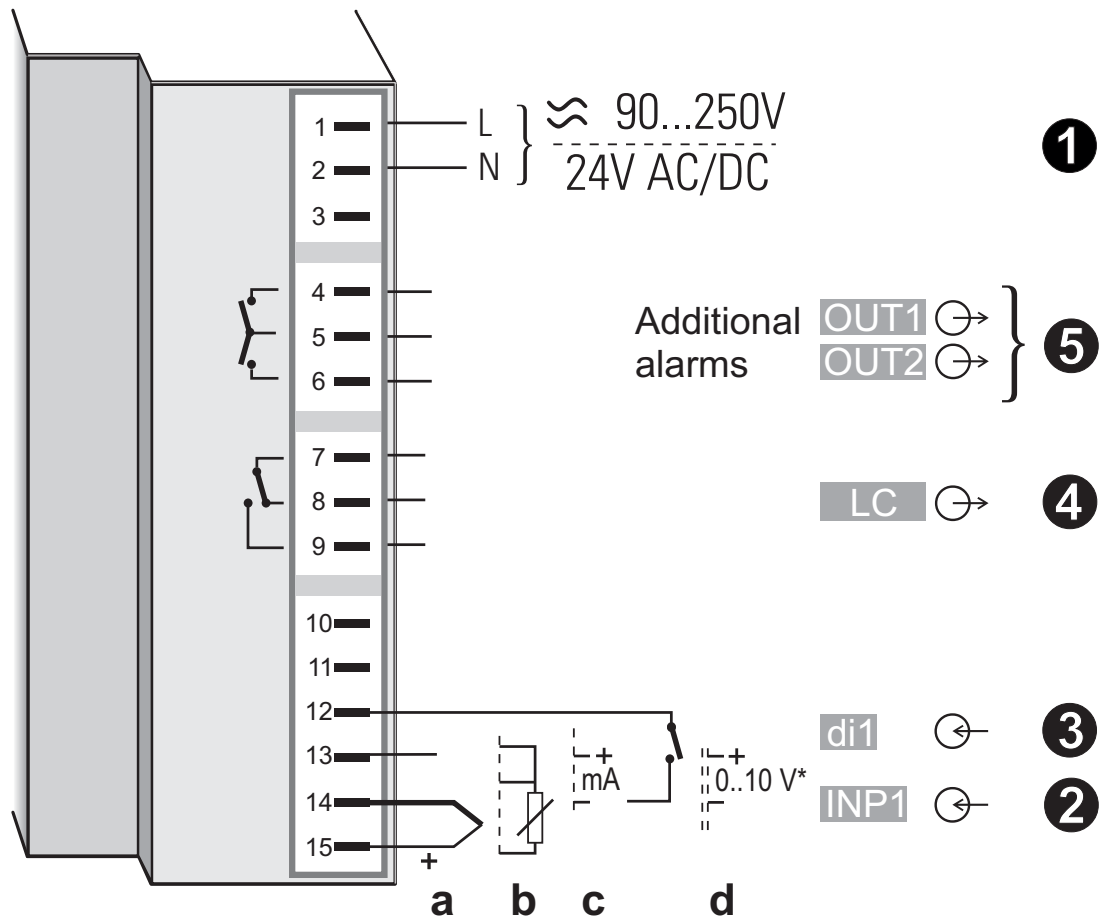

* Safety switch mA \leftrightarrow V in position left

i The controller is fitted with flat-pin terminals 1 x 6,3mm or 2 x 2,8mm to DIN 46 244 or screw terminals from 0,5 to 2,5mm².

2.2 Terminal connection

Power supply connection 1

See chapter "Technical data"

Connection of input INP1 2

Input for variable x1 (process value)

- a** thermocouple
- b** resistance thermometer (Pt100/ Pt1000/ KTY/ ...)
- c** current (0/4...20mA)
- d** voltage (0/2...10V)

Connection of input *di1* ③

Digital input, configurable as switch or push-button

Connection of output *OUT LC* ④

Relay (250V/2A), potential-free changeover contact


Connection of outputs *OUT1/2* ⑤

Relay outputs 250V/2A normally open with common contact connection



The pre-alarms (OUT1/2) must be used only for signalling and not for control purposes!

TB40-1 connecting example:

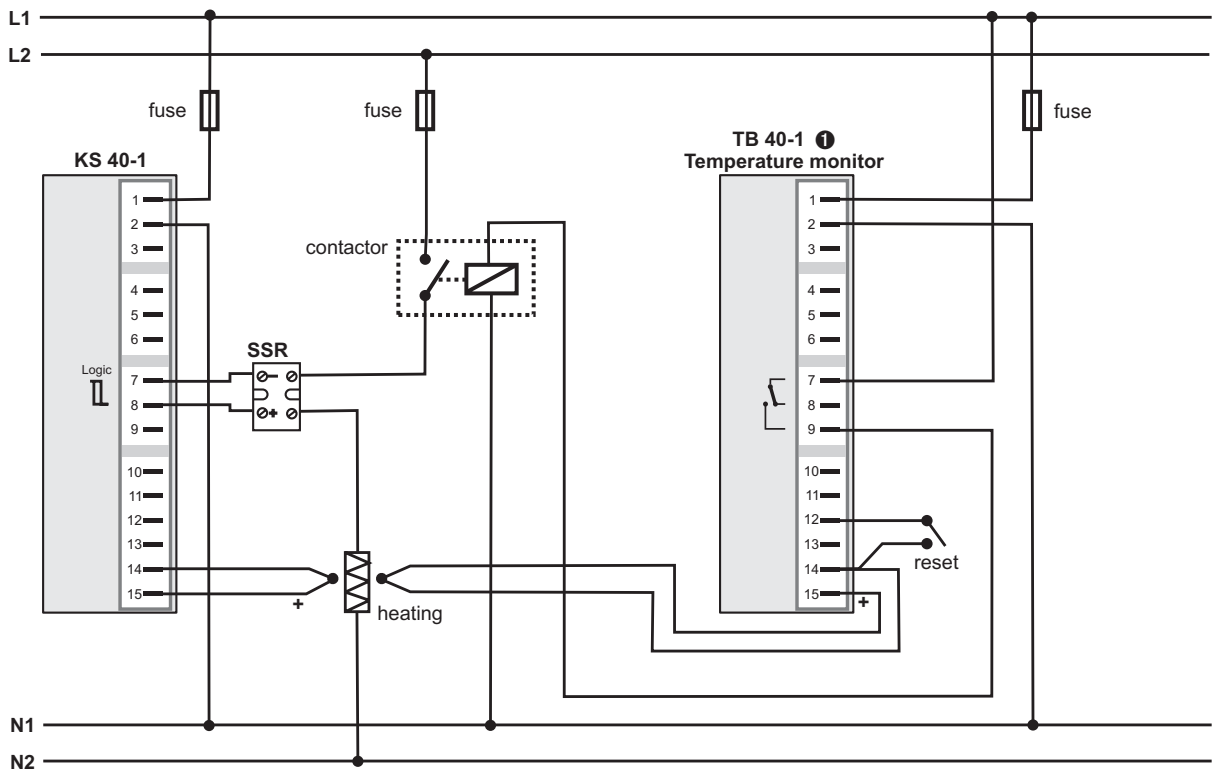

① TB 40-1 Temperature monitor
Standard version (3 relays):
TB40-100-0000D-000
→ other versions on request




CAUTION:

The configuration "Temperature monitor with stored alarm" should not be used in systems as a temperature limit device. Carry out a risk assessment to identify additional safety requirements on systems where over temperature implies a fire hazard or other risks.

3 Operation

3.1 Front view

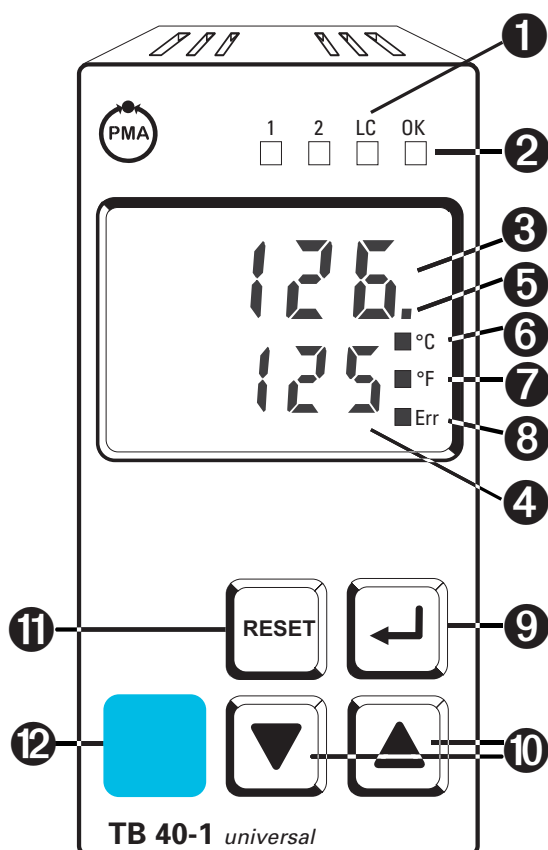

- ① Status of limits
L_{lim2}, L_{lim3}, LC
- ② Lit with limit value 1
(PARR / L_{lim}) not exceeded
- ③ Process value display
- ④ Set-point LC
- ⑤ Signals CONF and PARR level
- ⑥ Display in degrees celsius (°C)
- ⑦ Display in degrees fahrenheit (°F)
- ⑧ Entry in error list
- ⑨ Enter key:
calls up extended operating level / error list
- ⑩ Up/down keys:
changing the set-point or the controller output value
- ⑪ RESET key for reset of latched errors
- ⑫ PC connection for BlueControl (engineering tool)

LED colours:

LED 1, 2, 3: yellow
 LED OK: green
 other LEDs: red

- ⓘ In the upper display line, the process value is always displayed (Exception: CONF / other / DISP = 0). At parameter, configuration, calibration as well as extended operating level, the bottom display line changes cyclically between parameter name and parameter value.

3.2 Behaviour after power-on


After supply voltage switch-on, the unit starts with the **operating level**. The unit is in the condition which was active before power-off.

3.3 Behavior with sensor break/ measuring circuit error


If a sensor break/ measuring circuit error is recognized, the process value display changes to FAIL and the Err-LED blinks. (-> Page 11 chapter 3.5 maintenance manager/ error list). All configured alarm limits are handled as exceeded, the appropriate Outputs are switched. The OK-LED ceases and the LC Output is opened.

3.4 Setting of the limit value LC / Extended operating level


Setting of the limit value LC

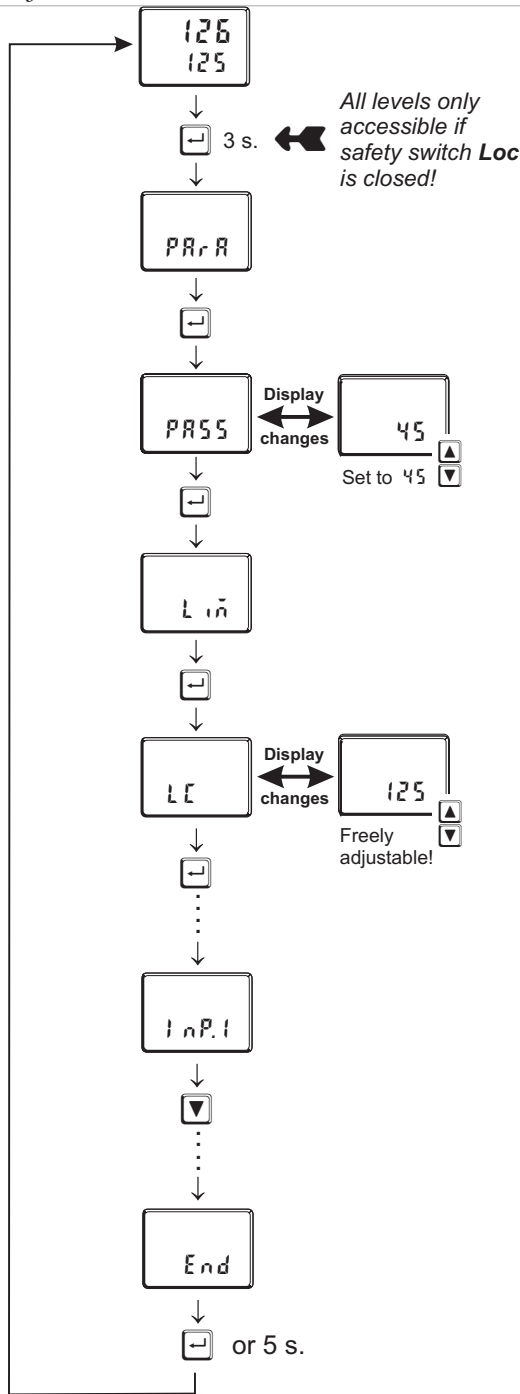

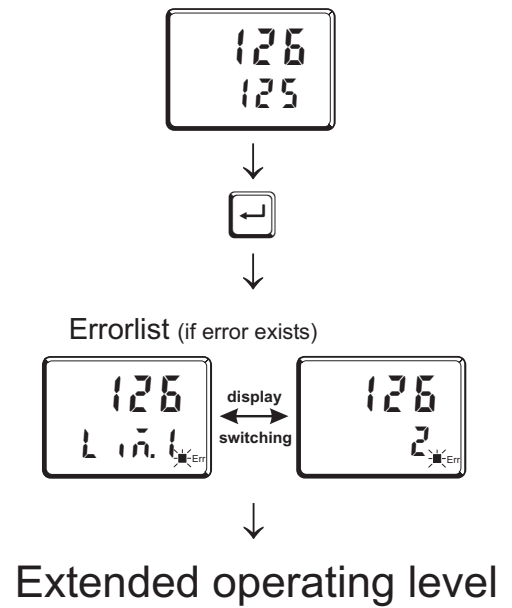

Extended operating level



3.5 Maintenance manager / Error list



With one or several errors, the extended operating level always starts with the error list. Signalling an actual entry in the error list (alarm, error) is done by the Err LED in the display. To reach the error list press  twice.



| Err LED status | Signification | Proceed as follows |
|----------------|--|---|
| blinks | Alarm due to existing error | <ul style="list-style-type: none"> - Determine the error type in the error list via the error number - Remove the error |
| lit | Error removed, Alarm not acknowledged | <ul style="list-style-type: none"> - Acknowledge the alarm in the error list pressing key  or  - The alarm entry was deleted. |
| off | No error, all alarm entries deleted | |

Error list:

| Name | Description | Cause | Possible remedial action |
|-------|-----------------------------------|--|---|
| E.1 | Internal error, cannot be removed | - E.g. defective EEPROM | <ul style="list-style-type: none"> - Contact PMA service - Return unit to our factory |
| E.2 | Internal error, can be reset | - e.g. EMC trouble | <ul style="list-style-type: none"> - Keep measurement and power supply cables in separate runs - Ensure that interference suppression of contactors is provided |
| FbF.1 | Sensor break INP1 | <ul style="list-style-type: none"> - Sensor defective - Faulty cabling | <ul style="list-style-type: none"> - Replace INP1 sensor - Check INP1 connection |
| ShE.1 | Short circuit INP1 | <ul style="list-style-type: none"> - Sensor defective - Faulty cabling | <ul style="list-style-type: none"> - Replace INP1 sensor - Check INP1 connection |
| POL.1 | INP1 polarity error | - Faulty cabling | - Reverse INP1 polarity |
| L.n.1 | Stored LC alarm | - adjusted limit value LC exceeded | - check process |
| L.n.2 | Stored alarm 2 | - adjusted limit value alarm 2 exceeded | - check process |
| L.n.3 | Stored alarm 3 | - adjusted limit value alarm 3 exceeded | - check process |
| Inf.1 | time limit value message | - adjusted number of operating hours reached | - application-specific |

- 
 Saved alarms (Err-LED is lit) can be acknowledged and deleted with the digital input di1 or the RESET-key.
 Configuration, see page : `CONF / LOG / Error`
- 
 If an alarm is still valid that means the cause of the alarm is not removed so far (Err-LED blinks), then other saved alarms can not be acknowledged and deleted.


Error status:

| Error status | Signification | |
|--------------|------------------|--|
| 2 | Existing error | Change to error status 1 after error removal |
| 1 | Stored error | Change to error status 0 after acknowledgement in error list |
| 0 | No error/message | not visible, except with acknowledgement |


3.6 Alarm handling

3.6.1 Alarm handling limit value LC

Method of operation upper limit:
 (`CONF / Limit / Funct = 3`)

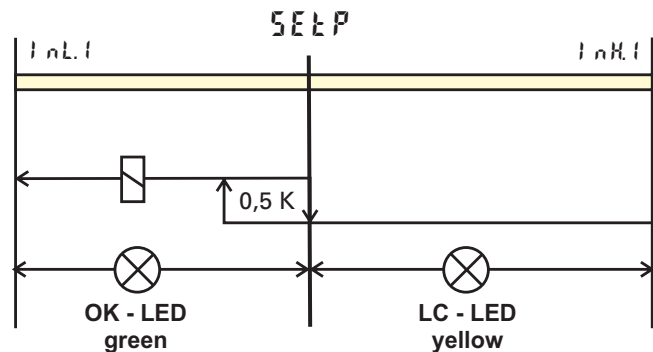


Method of operation lower limit:
 (`CONF / Limit / Funct = 4`)

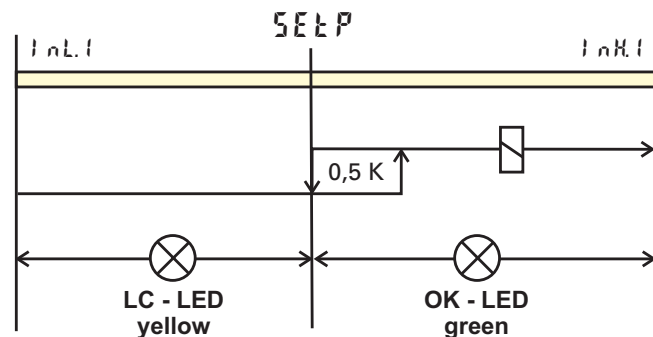


3.6.2 Alarm handling additional alarms

Max. two alarms can be configured and assigned to the individual outputs. Generally, outputs *Out.1* and *Out.2* can be used each for alarm signalling. Each of the 2 limit values *L.1* and *L.2* has 2 trigger points *H.2/H.3* (Max) and *L.2/L.3* (Min), which can be switched off individually (parameter = "OFF"). Switching difference *HYS.2/HYS.3* of each limit value is adjustable.


① Operating principle $Src.x = 0$
 $L.1 = OFF$

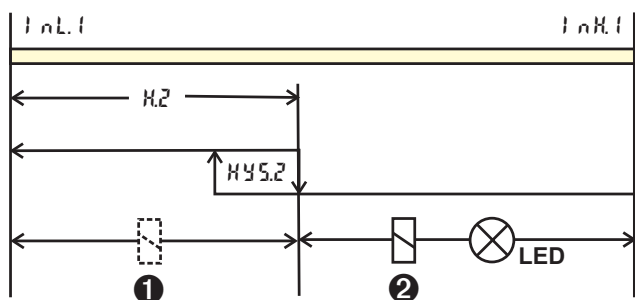




② Operating principle $Src.x = 1$
 $L.1 = OFF$

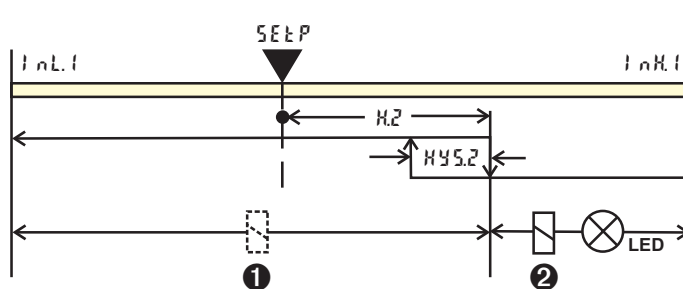

$H.1 = OFF$

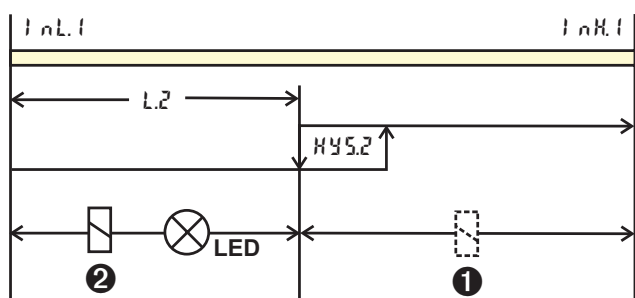

$H.1 = OFF$

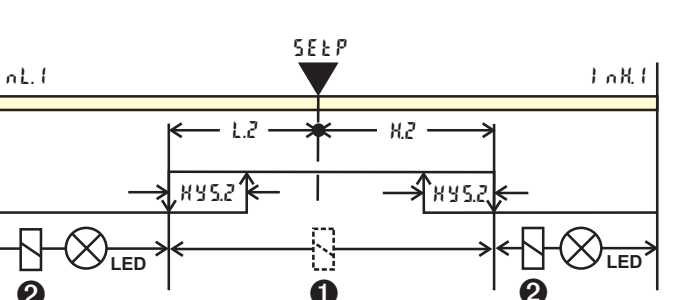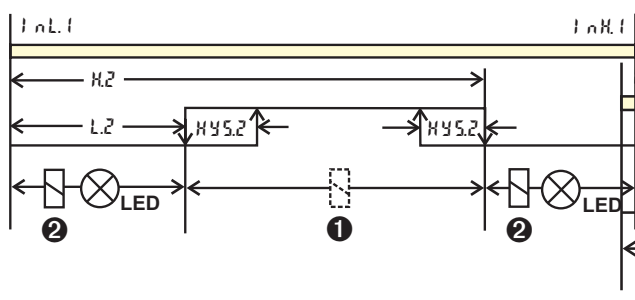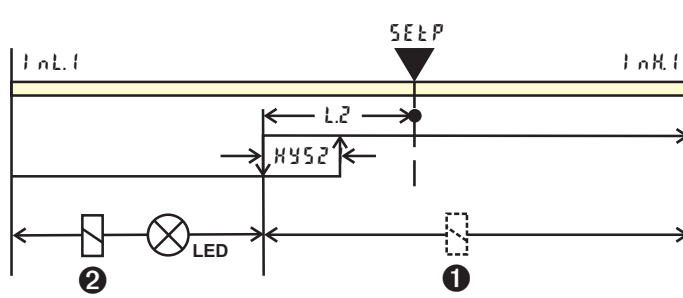

①: normally closed ($CONF/Out.x/Act = 1$)

②: normally open ($CONF/Out.x/Act = 0$)



The pre-alarms (OUT1/2) must be used only for signalling and not for control purposes!


i The variable to be monitored can be selected separately for each alarm via configuration

The following variables can be monitored:

- process value
- control deviation xw (process value - LC limit (LE))

3.7 Operating structure

After supply voltage switch-on, the controller starts with the **operating levels**. The controller status is as before power off.

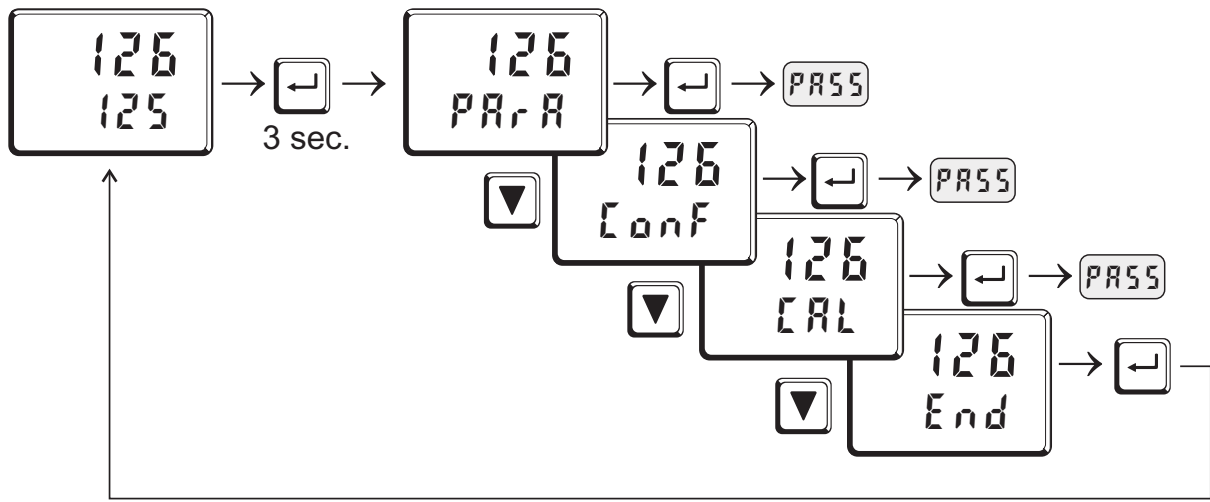

i **PArA** - level: At **PArA** - level, the right decimal point of the upper display line is *lit continuously*.

i **Conf** - level: At **Conf** - level, the right decimal point of the upper display line *blinks*.

PASS

All levels are only accessible by entry of the password **PASS** .
When safety switch **Loc** is open, no access to all levels is possible.

Factory setting:

Safety switch **Loc** closed: all levels accessible without restriction, password **PASS** = 45 .

| Safety switch Loc | Password entered with BluePort® | Function disabled or enabled with BluePort® | Access via the instrument front panel: |
|--------------------------|--|--|--|
| closed | OFF / password | disabled / enabled | enabled |
| open | OFF / password | disabled | disabled |
| open | OFF | enabled | enabled |
| open | Password | enabled | enabled after password entry |

4 Configuration level

4.1 Configuration survey

| CONF Configuration level | | | | | | | |
|--------------------------|-----------------------|---------|----------|----------|----------------|---------|-----|
| | Limit value functions | Input 1 | Output 2 | Output 3 | Digital inputs | Display | End |
| ▲ | Fnc.1 | StYP | ORct | ORct | Errr | Un it | |
| ▼ | Fnc.2 | SL in | | | | dP | |
| | Src.2 | Corr | | | | dISP | |
| | Fnc.3 | | | | | | |
| | Src.3 | | | | | | |



Adjustment:

- The configuration can be adjusted by means of keys ▲▼ .
- Transition to the next configuration is by pressing key ↵ .
- After the last configuration of a group, done is displayed and followed by automatic change to the next group



Return to the beginning of a group is by pressing the ↵ key for 3 sec.

4.2 Configuration

L i m

| Name | Value range | Description | Default |
|------------------|-------------|---|-----------|
| Fcn.1 | | Function of limit 1 | 3 |
| | 3 | Measured value monitoring + latching of the alarm status of the upper limit. A latched alarm can be reset by the error list, the digital input or the RESET-key (-> L O G I / E r r o r). | TW_S ① |
| | 4 | Measured value monitoring + latching of the alarm status of the lower limit. A latched alarm can be reset by the error list, the digital input or the RESET-key (-> L O G I / E r r o r). | TW_S ① |
| | 5 | Measured value monitoring upper limit (no latching) | TW ① |
| | 6 | Measured value monitoring lower limit (no latching) | TW ① |
| Fcn.2 / 3 | | Function of limit 2 / 3 | 0 / 0 |
| | 0 | switched off | |
| | 1 | measured value monitoring | |
| | 2 | Measured value monitoring + latching of the alarm status. A latched alarm can be reset by the error list, the digital input DI1 or the RESET-key (-> L O G I / E r r o r). | |
| Src.2 / 3 | | Source of limit 2 / 3 | 0 / 0 |
| | 0 | process value | |
| | 1 | control deviation xw (process value - set-point) | |
| Hour | OFF...10000 | Operating hours (only visible with BlueControl!) | OFF |
| Sw. it | OFF...10000 | Output switching cycles (only visible with BlueControl!) | OFF |

①

TW: Temperature monitor

TW_S: Temperature monitor with stored alarm

I n P. 1

| Name | Value range | Description | Default |
|-------------|----------------------|---|---------|
| SEYP | | Sensor type selection | 1 |
| | 0 | thermocouple type L (-100...900°C), Fe-CuNi (DIN) | |
| | 1 | thermocouple type J (-100...1200°C), Fe-CuNi | |
| | 2 | thermocouple type K (-100...1350°C), NiCr-Ni | |
| | 3 | thermocouple type N (-100...1300°C), Nicrosil-Nisil | |
| | 4 | thermocouple type S (0...1760°C), PtRh-Pt10% | |
| | 5 | thermocouple type R (0...1760°C), PtRh-Pt13% | |
| | 6 | thermocouple type T (-200...400°C), Cu-CuNi | |
| | 7 | thermocouple type C (0...2315°C), W5%Re-W26%Re | |
| | 8 | thermocouple type D (0...2315°C), W3%Re-W25%Re | |
| | 9 | thermocouple type E (-100...1000°C), NiCr-CuNi | |
| | 10 | thermocouple type B (0/100...1820°C), PtRh-Pt6% | |
| 18 | special thermocouple | | |

| Name | Value range | Description | Default |
|--------|-------------|--|---------|
| | 20 | Pt100 (-200.0 ... 100,0 °C) | |
| | 21 | Pt100 (-200.0 ... 850,0 °C) | |
| | 22 | Pt1000 (-200.0 ... 850.0 °C) | |
| | 23 | special 0...4500 Ohm (preset to KTY11-6) | |
| | 24 | special 0...450 Ohm | |
| | 30 | 0...20mA / 4...20mA ❶ | |
| | 40 | 0...10V / 2...10V ❶ | |
| 5.L in | | Linearization (only at S.tYP = 23 (KTY 11-6), 24 (0...450Ω), 30 (0..20mA), 40 (0..10V) and 41 (0...100mV)) | 0 |
| | 0 | none | |
| | 1 | Linearization to specification. Creation of linearization table with engineering tool possible. The characteristic for KTY 11-6 temperature sensors is preset. | |
| Corr | | Measured value correction / scaling | 0 |
| | 0 | Without scaling | |
| | 1 | Offset correction (at ϵ_{RL} level) | |
| | 2 | 2-point correction (at ϵ_{RL} level) | |
| | 3 | Scaling (at P_{RRR} level) | |

❶ with current and voltage input signals, scaling is required (see chapter 5.3)

Out.1

| Name | Value range | Description | Default |
|------|-------------|---------------------------------|---------|
| OAct | | Method of operation OUT1 | 0 |
| | 0 | direct / normally open | |
| | 1 | inverse / normally closed | |

Out.2

| Name | Value range | Description | Default |
|------|-------------|---------------------------------|---------|
| OAct | | Method of operation OUT2 | 0 |
| | 0 | direct / normally open | |
| | 1 | inverse / normally closed | |

LOG1

| Name | Value range | Description | Default |
|------|-------------|----------------------------------|---------|
| Errr | | Reset of all limit alarms | 6 |
| | 2 | DII | |
| | 6 | RESET- key | |

o b h r

| Name | Value range | Description | Default |
|------|-------------|--|---------|
| Unit | | Unit | 1 |
| | 0 | without unit | |
| | 1 | °C | |
| | 2 | °F | |
| dP | | Decimal point (max. number of digits behind the decimal point) | 0 |
| | 0 | No digit behind the decimal point | |
| | 1 | 1 digit behind the decimal point | |
| | 2 | 2 digits behind the decimal point | |
| | 3 | 3 digits behind the decimal point | |
| dISP | | Type of measured value display | 1 |
| | 0 | No measured value display | |
| | 1 | Full display resolution | |
| | 2 | Display resolution: 2 digits | |
| | 3 | Display resolution: 5 digits | |
| | 4 | Display resolution: 10 digits | |
| DEL | 0..200 | Modem delay [ms] | 0 |
| FrEQ | | Switching 50 Hz / 60 Hz (only visible with BlueControl!) | 0 |
| | 0 | 50 Hz | |
| | 1 | 60 Hz | |



Resetting the device configuration to factory setting (Default)
→ chapter 10.1 (page 30)



BlueControl - the engineering tool for the BluePort[®] controller series

3 engineering tools with different functionality facilitating TB40-1 configuration and parameter setting are available (see chapter 8: *Accessory equipment with ordering information*).

In addition to configuration and parameter setting, the engineering tools are used for data acquisition and offer long-term storage and print functions. The engineering tools are connected to TB40-1 via the front-panel interface "BluePort[®]" by means of PC and a PC adaptor.

Description BlueControl: see chapter 7: *BlueControl* (page 23).

5 Parameter setting level

5.1 Parameter survey

| Parameter setting level | | | | |
|-------------------------|-----------------------|--------|------------------|-----|
| | Limit value functions | Input | LC setting range | End |
| ▲ | L1 | InL.1 | rnGL | |
| ▼ | L2 | OutL.1 | rnGH | |
| | H2 | InH.1 | | |
| | H45.2 | OutH.1 | | |
| | L3 | EF.1 | | |
| | H3 | | | |
| | H45.3 | | | |



Adjustment:

- The parameters can be adjusted by means of keys ▲▼
- Transition to the next parameter is by pressing key →
- After the last parameter of a group, done is displayed, followed by automatic change to the next group.



Return to the beginning of a group is by pressing the ← key for 3 sec.

5.2 Parameters

L iñ

| Name | Value range | Description | Default |
|------|--------------|--------------------|---------|
| LC | -1999...9999 | LC limit | 100 |
| L2 | -1999...9999 | Lower limit 2 | OFF |
| H2 | -1999...9999 | Upper limit 2 | OFF |
| HYS2 | 0...9999 | Hysteresis limit 2 | 1 |
| L3 | -1999...9999 | Lower limit 3 | OFF |
| H3 | -1999...9999 | Upper limit 3 | OFF |
| HYS3 | 0...9999 | Hysteresis limit 3 | 1 |

I nP.1

| Name | Value range | Description | Default |
|--------|--------------|---|---------|
| InL.1 | -1999...9999 | Input value for the lower scaling point | 0 |
| OutL.1 | -1999...9999 | Displayed value for the lower scaling point | 0 |
| InH.1 | -1999...9999 | Input value for the upper scaling point | 20 |
| OutH.1 | -1999...9999 | Displayed value for the upper scaling point | 20 |
| TF1 | -1999...9999 | Filter time constant [s] | 0,5 |

r nG

| Name | Value range | Description | Default |
|-------|--------------|---------------------------------------|---------|
| r nGL | -1999...9999 | Set-point limit low for set-point LC | -1999 |
| r nGH | -1999...9999 | Set-point limit high for set-point LC | 9999 |




Resetting the device configuration to factory setting (Default)

→ chapter 10.1 (page 30)

5.3 Input scaling $I n P. I$

When using current or voltage signals as input variables for $I n P. I$ scaling of input and display values at parameter setting level is required. Specification of the input value for lower and higher scaling point is in the relevant electrical unit (mA/ V).

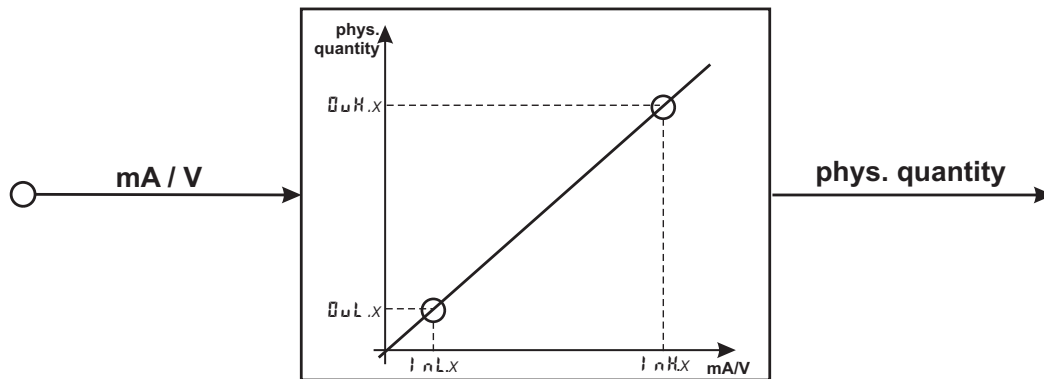

i Parameters $I n L. I$, $Q u L. I$, $I n H. I$ and $Q u H. I$ are only visible if $E o n F / I n P. I / E o r r = 3$ is chosen.

| 5. E Y P | Input signal | $I n L. I$ | $Q u L. I$ | $I n H. I$ | $Q u H. I$ |
|------------------|--------------|------------|------------|------------|------------|
| 30 (0...20mA) | 0 ... 20 mA | 0 | any | 20 | any |
| | 4 ... 20 mA | 4 | any | 20 | any |
| 40 (0...10V) | 0 ... 10 V | 0 | any | 10 | any |
| | 2 ... 10 V | 2 | any | 10 | any |

In addition to these settings, $I n L. I$ and $I n H. I$ can be adjusted in the range (0...20mA / 0...10V) determined by selection of 5. E Y P .

! For using the predetermined scaling with thermocouple and resistance thermometer (Pt100), the settings for $I n L. I$ and $Q u L. I$ and for $I n H. I$ and $Q u H. I$ must have the same value.

i Input scaling changes at calibration level (\rightarrow page 20) are displayed by input scaling at parameter setting level. After calibration reset (**OFF**), the scaling parameters are reset to default.

6 Calibration level


i Measured value correction (ϵ_{RL}) is only visible if $\epsilon_{conf} / \epsilon_{inp.1} / \epsilon_{corr} = 1$ or 2 is chosen.

The measured value can be matched in the calibration menu (ϵ_{RL}). Two methods are available:

Offset correction

($\epsilon_{conf} / \epsilon_{inp.1} / \epsilon_{corr} = 1$):


- possible on-line at the process

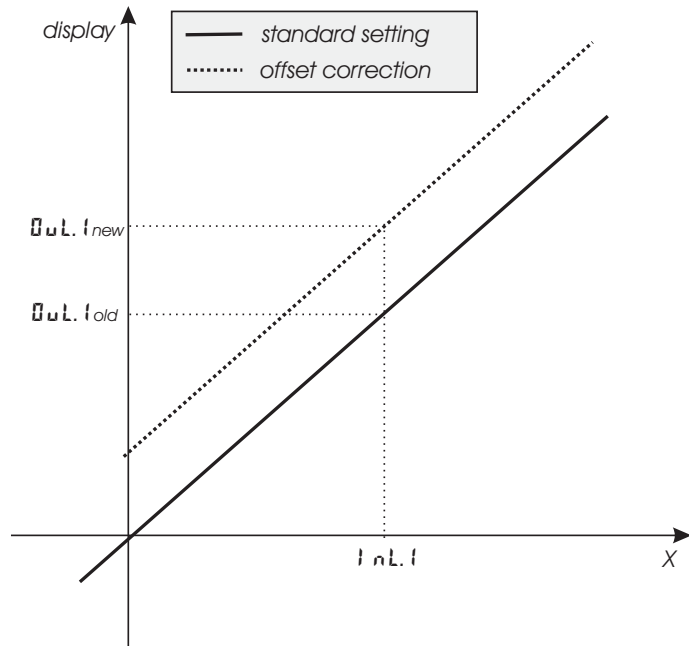


2-point correction

($\epsilon_{conf} / \epsilon_{inp.1} / \epsilon_{corr} = 2$):

- is possible off-line with process value simulator

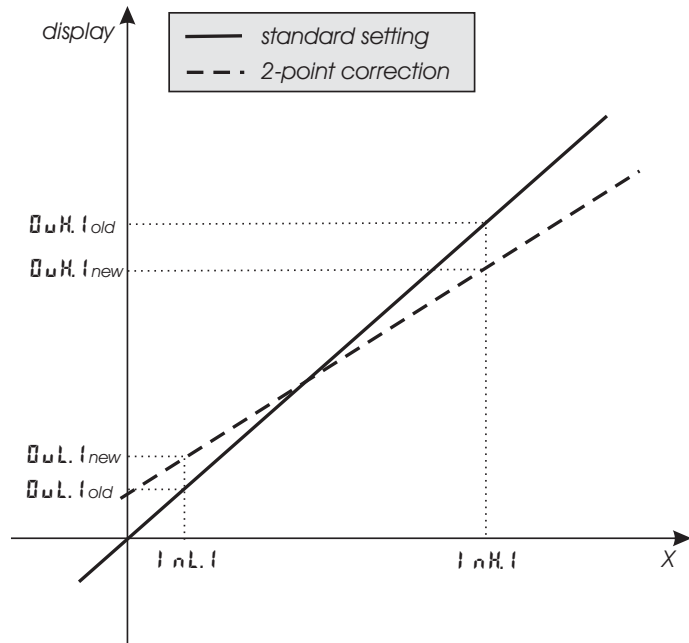


Offset correction (CONF / InP.1 / Err = 1):

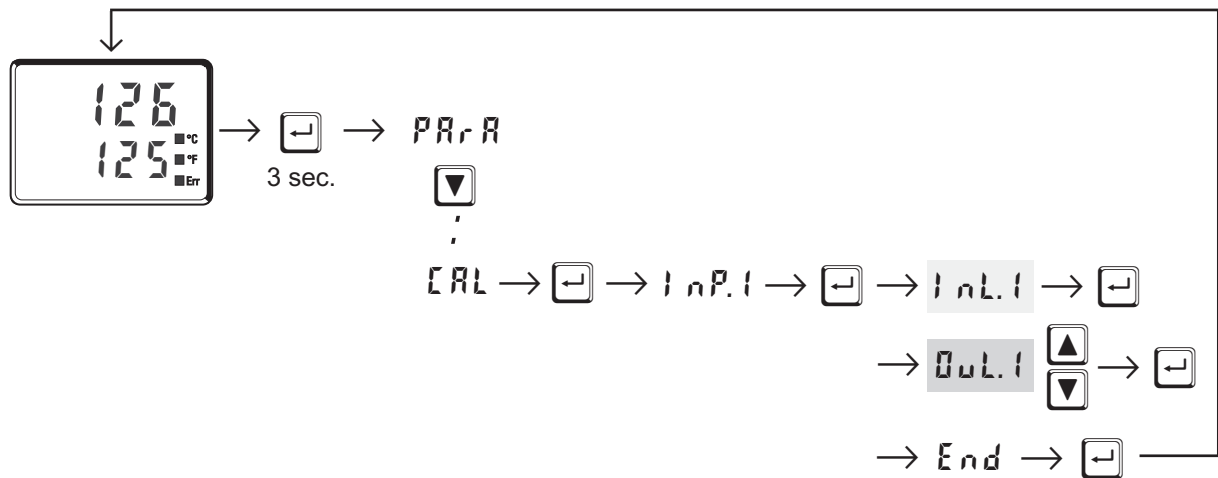

- InL.1:** The input value of the scaling point is displayed.
The operator must wait, until the process is at rest.
Subsequently, the operator acknowledges the input value by pressing key .
- Out.1:** The display value of the scaling point is displayed.
Before calibration, **Out.1** is equal to **InL.1**.
The operator can correct the display value by pressing keys .
Subsequently, he confirms the display value by pressing key .

2-point correction (CONF / INP.1 / CORR = 2):

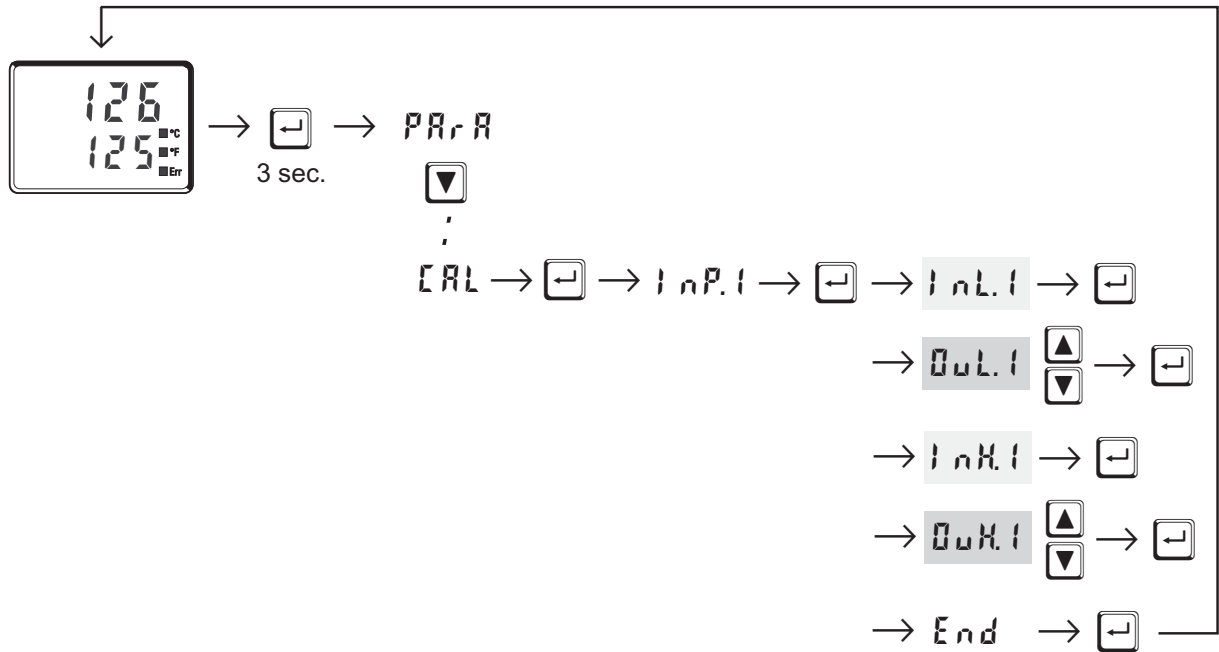

- InL.1:** The input value of the lower scaling point is displayed.
The operator must adjust the lower input value by means of a process value simulator and confirm the input value by pressing key .
- OutL.1:** The display value of the lower scaling point is displayed.
Before calibration, **OutL.1** equals **InL.1**.
The operator can correct the lower display value by pressing the keys. Subsequently, he confirms the display value by pressing key .
- InH.1:** The input value of the upper scaling point is displayed. .
The operator must adjust the upper input value by means of the process value simulator and confirm the input value by pressing key .
- OutH.1:** The display value of the upper scaling point is displayed.
Before calibration **OutH.1** equals **InH.1**.
The operator can correct the upper display value by pressing keys Subsequently, he confirms the display value by pressing key .

The parameters (**OutL.1**, **OutH.1**) changed at **CAL** level can be reset by adjusting the parameters below the lowest adjustment value (**OFF**) by means of decrement key .

7 BlueControl


BlueControl is the projection environment for the BluePort[®] controller series of PMA. The following 3 versions with graded functionality are available:

| FUNCTIONALITY | MINI | BASIC | EXPERT |
|--|----------|-------|--------|
| parameter and configuration setting | yes | yes | yes |
| controller and loop simulation | yes | yes | yes |
| download: transfer of an engineering to the controller | yes | yes | yes |
| online mode/ visualization | SIM only | yes | yes |
| defining an application specific linearization | yes | yes | yes |
| configuration in the extended operating level | yes | yes | yes |
| upload: reading an engineering from the controller | SIM only | yes | yes |
| basic diagnostic functions | no | no | yes |
| saving data file and engineering | no | yes | yes |
| printer function | no | yes | yes |
| online documentation, help | yes | yes | yes |
| implementation of measurement value correction | yes | yes | yes |
| data acquisition and trend display | SIM only | yes | yes |
| wizard function | yes | yes | yes |
| extended simulation | no | no | yes |
| programmeditor (KS 90-1prog only) | no | no | yes |

The mini version is - free of charge - at your disposal as download at PMA home-page www.pma-online.de or on the PMA-CD (please ask for).

At the end of the installation the licence number has to be stated or DEMO mode must be chosen.

At DEMO mode the licence number can be stated subsequently under *Help* → *Li-
cence* → *Change*.

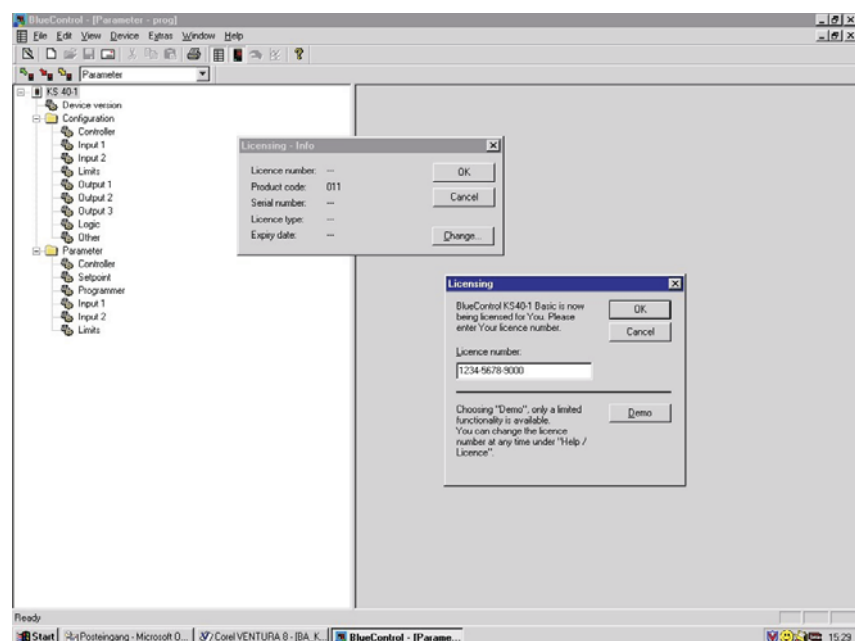

8 Versions

| | T | B | 4 | 0 | - | 1 | | | | - | 0 | 0 | 0 | | | | |
|---|---|---|---|---|---|---|--|--|--|---|---|---|---|---|--|---|----|
| Flat pin connectors | | | | | | 0 | | | | | | | | | | | |
| Screw terminal connectors | | | | | | 1 | | | | | | | | | | | |
| 90..250V AC, 3 relays TW | | | | | | | | | | | 0 | | | | | | |
| 24VAC / 18..30VDC, 3 relays TW | | | | | | | | | | | 1 | | | | | | |
| Standard configuration | | | | | | | | | | | | | 0 | | | | |
| Configuration to specification | | | | | | | | | | | | | 9 | | | | |
| No manual | | | | | | | | | | | | | | 0 | | | |
| Manual german | | | | | | | | | | | | | | D | | | |
| Manual english | | | | | | | | | | | | | | E | | | |
| Manual french | | | | | | | | | | | | | | F | | | |
| Standard | | | | | | | | | | | | | | | | 0 | |
| cULus certified (with screw terminals only) | | | | | | | | | | | | | | | | U | |
| EN 14597 certified (replaces DIN 3440) | | | | | | | | | | | | | | | | D | |
| Standard version | | | | | | | | | | | | | | | | | 00 |
| Customer specification | | | | | | | | | | | | | | | | | .. |

Accessories delivered with the unit

Operating manual (if selected by the ordering code)

- 2 fixing clamps
- operating note in 15 languages

Accessory equipment with ordering information

| Description | | | Order no. |
|--|---------|----------|-------------------|
| PC-adaptor for the front-panel interface | | | 9407-998-00001 |
| Standard rail adaptor | | | 9407-998-00061 |
| Operating manual | German | | 9499-040-63418 |
| Operating manual | English | | 9499-040-63411 |
| Operating manual | French | | 9499-040-63432 |
| BlueControl (engineering tool) | Mini | Download | www.pma-online.de |
| BlueControl (engineering tool) | Basic | | 9407-999-11001 |
| BlueControl (engineering tool) | Expert | | 9407-999-11011 |

9 Technical data

INPUTS

PROCESS VALUE INPUT INP1

Resolution: > 14 bits
 Decimal point: 0 to 3 digits behind the decimal point
 Dig. input filter: adjustable 0,000...9999 s
 Scanning cycle: 100 ms
 Measured value correction: 2-point or offset correction

Thermocouples

→ Table 1 (page 27)

Input resistance: ≥ 1 MΩ
 Effect of source resistance: 1 μV/Ω

Cold-junction compensation

Maximal additional error: ± 0,5 K

Sensor break monitoring

Sensor current: ≤ 1 μA
 Configurable output action

Resistance thermometer

→ Table 2 (page 27)

Connection: 2 or 3-wire
 Lead resistance: max. 30 Ohm
 Input circuit monitor: break and short circuit

Special measuring range

BlueControl (engineering tool) can be used to match the input to sensor KTY 11-6 (characteristic is stored in the controller).

Physical measuring range: 0...4500 Ohm
 Linearization segments 16

Current and voltage signals

→ Table 3 (page 27)

Span start, end of span: anywhere within measuring range
 Scaling: selectable -1999...9999
 Linearization: 16 segments, adaptable with BlueControl
 Decimal point: adjustable
 Input circuit monitor: 12,5% below span start (2mA, 1V)

CONTROL INPUT DI1

Configurable as switch or push-button!
 Connection of a potential-free contact suitable for switching "dry" circuits.

Switched voltage: 2,5 V
 Current: 50 μA

GALVANIC ISOLATION

— Safety isolation
 = Function isolation

OUTPUTS

| | |
|--------------------------|---|
| Power supply connections | Process value input INP1 Digital input di1 |
| Relay outputs OUT 1,2 | |
| Relay output OUTLC | |

OUTPUT OUT LC

Function:
 Interruption of the power supply if the set limit is exceeded or fallen short.

Contact type: potential-free changeover contact
 Max.contact rating: 500 VA, 250 V, 2A at 48...62 Hz, resistive load
 Min. contact rating: 5V, 10 mA AC/DC
 Operating life (electr.): 600.000 duty cycles with max. contact rating

OUTPUTS OUT1, OUT2

Function:
 Additional alarms with MAX, MIN or MAX+MIN monitoring with adjustable hysteresis.

Monitored signals:

- process value (absolut)
- difference to the limit (relative)
- sensor break / short circuit

According to the input type, the input signal is monitored to sensor break, polarity error and short circuit

Contact type: 2 NO contacts with common connection
 Max. contact rating: 500 VA, 250 V, 2A at 48...62 Hz, resistive load
 Min. contact rating: 6V, 1 mA DC
 Operating life (electr.): 800.000 duty cycles with max. rating

Note:

If the relays OUT1...OUT LC operate external contactors, these must be fitted with RC snubber circuits to manufacturer specifications to prevent excessive switch-off voltage peaks.

POWER SUPPLY

Dependent of order

AC SUPPLY

| | |
|-------------------|----------------|
| Voltage: | 90...250 V AC |
| Frequency: | 48...62 Hz |
| Power consumption | approx. 7.3 VA |

UNIVERSAL SUPPLY 24 V UC

| | |
|--------------------|------------------|
| AC voltage: | 20,4...26,4 V AC |
| Frequency: | 48...62 Hz |
| DC voltage: | 18...31 V DC |
| Power consumption: | approx.. 7.3 VA |

BEHAVIOUR WITH POWER FAILURE

Configuration, parameters and adjusted set-points, control mode:

Non-volatile storage in EEPROM

BLUEPORT FRONT INTERFACE

Connection of PC via PC adapter (see "Accessory equipment"). The BlueControl software is used to configure, set parameters and operate the TB40-1.

ENVIRONMENTAL CONDITIONS

Protection modes

| | |
|--------------|-----------------|
| Front panel: | IP 65 (NEMA 4X) |
| Housing: | IP 20 |
| Terminals: | IP 00 |

Permissible temperatures

| | |
|-------------------------|--------------|
| For specified accuracy: | 0...60°C |
| Warm-up time: | ≥ 15 minutes |
| For operation: | -20...65°C |
| For storage: | -40...70°C |

Humidity

75% yearly average, no condensation

Altitude

To 2000 m above sea level

Shock and vibration

Vibration test Fc (DIN 68-2-6)

| | |
|------------------------|----------------|
| Frequency: | 10...150 Hz |
| Unit in operation: | 1g or 0,075 mm |
| Unit not in operation: | 2g or 0,15 mm |

Shock test Ea (DIN IEC 68-2-27)

| | |
|-----------|------|
| Shock: | 15g |
| Duration: | 11ms |

Electromagnetic compatibility

Complies with EN 61 326-1

(for continuous, non-attended operation)

GENERAL

Housing

| | |
|---------------------|-------------------------------|
| Material: | Makrolon 9415 flame-retardant |
| Flammability class: | UL 94 V0, self-extinguishing |

Plug-in module, inserted from the front

Safety test

Complies with EN 61010-1 (VDE 0411-1):

Overvoltage category II

Contamination class 2

Working voltage range 300 V

Protection class II

Certifications

Type tested to EN 14597

With certified sensors applicable for:

- Heat generating plants with outflow temperatures up to 120°C to DIN 4751
- Hot-water plants with outflow temperatures above 110°C to DIN 4752
- Thermal transfer plants with organic transfer media to DIN 4754
- Oil-heated plants to DIN 4755

cULus-certification

(Type 1, indoor use)

File: E 208286

Electrical connections

- Flat-pin connectors 1 x 6,3 mm or 2 x 2,8 mm to DIN 46 244

Mounting

Panel mounting with two fixing clamps at top/bottom or right/left. High-density mounting possible

| | |
|--------------------|------------|
| Mounting position: | uncritical |
| Weight: | 0,27kg |

Accessories delivered with the unit

Operating manual

Fixing clamps

Table 1 Thermocouple measuring ranges

| Type | Range | | Accuracy | Resolution (∅) | |
|------|----------------|-----------------|------------------|----------------|--------|
| L | Fe-CuNi (DIN) | -100...900°C | -148...1652°F | ≤ 2K | 0,1 K |
| J | Fe-CuNi | -100...1200°C | -148...2192°F | ≤ 2K | 0,1 K |
| K | NiCr-Ni | -100...1350°C | -148...2462°F | ≤ 2K | 0,2 K |
| N | Nicrosil/Nisil | -100...1300°C | -148...2372°F | ≤ 2K | 0,2 K |
| S | PtRh-Pt 10% | 0...1760°C | 32...3200°F | ≤ 2K | 0,2 K |
| R | PtRh-Pt 13% | 0...1760°C | 32...3200°F | ≤ 2K | 0,2 K |
| T | Cu-CuNi | -200...400°C | -328...752°F | ≤ 2K | 0,05 K |
| C | W5%Re-W26%Re | 0...2315°C | 32...4199°F | ≤ 2K | 0,4 K |
| D | W3%Re-W25%Re | 0...2315°C | 32...4199°F | ≤ 2K | 0,4 K |
| E | NiCr-CuNi | -100...1000°C | -148...1832°F | ≤ 2K | 0,1 K |
| B* | PtRh-Pt6% | 0(100)...1820°C | 32(212)...3308°F | ≤ 2K | 0,3 K |

* Specifications valid from 400°C

Table 2 Resistance transducer measuring ranges

| Type | Sens. current | Range | | Accuracy | Resolution (∅) |
|-----------|---------------|--------------|---------------|----------|----------------|
| Pt100 | 0,2mA | -200...100°C | -140...212°F | ≤ 1K | 0,1K |
| Pt100 | | -200...850°C | -140...1562°F | ≤ 1K | 0,1K |
| Pt1000 | | -200...850°C | -140...392°F | ≤ 2K | 0,1K |
| KTY 11-6* | | -50...150°C | -58...302°F | ≤ 2K | 0,05K |

* Or special

Table 3 Current and voltage measuring ranges

| Range | Input resistance | Accuracy | Resolution (∅) |
|-----------|------------------------------------|----------|----------------|
| 0-10 Volt | ≈ 110 kΩ | ≤ 0,1 % | ≤ 0,6 mV |
| 0-20 mA | 49 Ω (voltage requirement ≤ 2,5 V) | ≤ 0,1 % | ≤ 1,5 μA |

10 Safety hints

This unit was built and tested in compliance with VDE 0411-1 / EN 61010-1 and was delivered in safe condition.

The unit complies with European guideline 89/336/EWG (EMC) and is provided with CE marking.

The unit was tested before delivery and has passed the tests required by the test schedule. To maintain this condition and to ensure safe operation, the user must follow the hints and warnings given in this operating manual.

The unit is intended exclusively for use as a measurement and control instrument in technical installations.



Warning

If the unit is damaged to an extent that safe operation seems impossible, the unit must not be taken into operation.

ELECTRICAL CONNECTIONS

The electrical wiring must conform to local standards (e.g. VDE 0100). The input measurement and control leads must be kept separate from signal and power supply leads.

In the installation of the controller a switch or a circuit-breaker must be used and signified. The switch or circuit-breaker must be installed near by the controller and the user must have easy access to the controller.

COMMISSIONING

Before instrument switch-on, check that the following information is taken into account:

- Ensure that the supply voltage corresponds to the specifications on the type label.
- All covers required for contact protection must be fitted.
- If the controller is connected with other units in the same signal loop, check that the equipment in the output circuit is not affected before switch-on. If necessary, suitable protective measures must be taken.
- The unit may be operated only in installed condition.
- Before and during operation, the temperature restrictions specified for controller operation must be met.

SHUT-DOWN

For taking the unit out of operation, disconnect it from all voltage sources and protect it against accidental operation.

If the controller is connected with other equipment in the same signal loop, check that other equipment in the output circuit is not affected before switch-off. If necessary, suitable protective measures must be taken.

MAINTENANCE, REPAIR AND MODIFICATION

The units do not need particular maintenance.

**Warning**

When opening the units, or when removing covers or components, live parts and terminals may be exposed.

Before starting this work, the unit must be disconnected completely.

After completing this work, re-shut the unit and re-fit all covers and components. Check if specifications on the type label must be changed and correct them, if necessary.

**Caution**

When opening the units, components which are sensitive to electrostatic discharge (ESD) can be exposed. The following work may be done only at workstations with suitable ESD protection.


Modification, maintenance and repair work may be done only by trained and authorized personnel. For this purpose, the PMA service should be contacted.



The cleaning of the front of the controller should be done with a dry or a wetted (spirit, water) kerchief.

10.1 *Resetting to factory setting*

In case of faulty configuration, TB40-1 can be reset to its factory default condition.

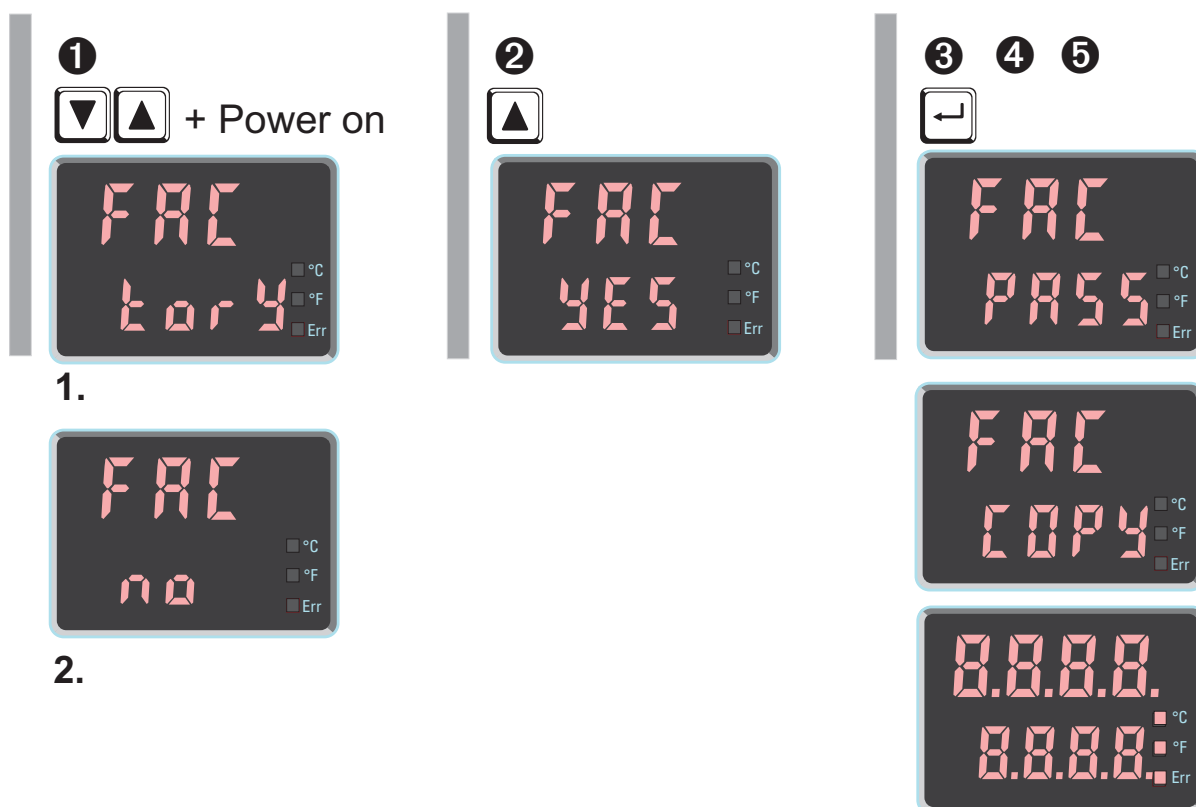



- 1 For this, the operator must keep the keys increment and decrement pressed during power-on:



- 2 For confirmation, press key increment to select **YES**.
- 3 Press the key enter to go to the password input.
- 4 After setting a valid password the factory resetting is confirmed with Enter and the copy procedure is started (display **COPY**).
- 5 Afterwards the device restarts.

In all other cases, no reset will occur (timeout abortion).

-  If the safety lock is open then factory resetting is not possible.
-  The copy procedure (**COPY**) can take some seconds. Now, the transmitter is in normal operation.

Index

- !
- 2-point correction. 21
- A**
- Accessory equipment. 25
- Additional alarms. 12
- Alarm handling 11 - 12
- B**
- BlueControl. 24
- C**
- Calibration level 21 - 23
- Certifications 27
- Configuration level 14 - 17
- Connecting diagramm 5
- Connecting example 6
- Current signal measuring range 26
- D**
- Digital input di1
 - Configuration 16
 - Technical data 26
- E**
- Engineering tool 17
- Environmental conditions 27
- Error list 10
- Error status 11
- Extended operating level. 8 - 9
- F**
- Front view 7
- H**
- Housing. 27
- I**
- Input INP1
 - Configuration 15
 - Parameter setting 19
 - Technical data 26
- Input scaling 20
- L**
- LC alarm 11
- LED
 - °C 7
 - °F 7
 - Err - LED 7
 - LED colours. 7
- M**
- Maintenance manager 10
- Method of operation limit value LC 11
- Mounting. 4
- O**
- Offset correction 21
- Output OUT1
 - Configuration 16
 - Technical data 26
- Output OUT2
 - Configuration 16
 - Technical data 26
- P**
- Parameter setting level 18 - 20
- Power supply 26
- R**
- RESET key. 7
- Resetting to factory setting. 31
- Resistance thermometer measuring range 26
- S**
- Safety hints 29 - 31
- Safety switch. 4
- Setting of limit value LC. 8 - 9
- T**
- Thermocouple measuring range 26
- V**
- Versions 25
- Voltage signal measuring range 26



9499-040-63411

Subject to alterations without notice
Änderungen vorbehalten
Sous réserve de toutes modifications

© PMA Prozeß- und Maschinen-Automation GmbH
P.O.B. 310 229, D-34058 Kassel, Germany
Printed in Germany 9499-040-63411 (08/2013)

A5 auf A6 gefaltet, 2-fach geheftet, SW-Druck Normalpapier weiß 80g/m²

A6